

TECHNICAL MANUAL

**ORGANIZATIONAL AND DIRECT SUPPORT
MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST
FOR**

**RADIO SET AN/PRC-25
(NSN 5820-00-857-0759)**

Distribution authorized to the Department of Defense and DOD contractors only for official use or for administration or operational purposes. This determination was made on 28 July 1988. Other requests for this document will be referred to Commander, US Army Communications-Electronics Command and Fort Monmouth, ATTN: AMSEL-LC-ME-P, Fort Monmouth, NJ 07703-5000.

DESTRUCTION NOTICE—Destroy by any method that will prevent disclosure of contents or reconstruction of the document.

Technical Manual

HEADQUARTERS

DEPARTMENT OF THE ARMY

No. 11-5820-398-34P

Washington, DC, 1 November 1988

DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST

FOR

RADIO SET AN/PRC-25
(NSN 5820-00-857-0759)

Current as of 1 August 1988

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS


You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in back of this manual direct to: Commander, US Army Communications-Electronics Command and Fort Monmouth, ATTN: AMSEL-LC-ME-PS, Fort Monmouth, New Jersey 07703-5000. In either case, a reply will be furnished direct to you.

Table of Contents

			Page	Illus/ Figure
Section	I.	Introduction.....	1	
	II.	Repair Parts List.....	1-1	
Group	00	Radio Set AN/PRC-25.....	1-1	1
	01	Antenna AT-271A/PRC.....	2-1	2
	05	Receiver-Transmitter RT-505/PRC-25..	3-1	3
		0501 Battery Box Assembly		
		CY-2562/PRC-25.....	4-1	4
		0502 Front Panel Assembly A30.....	5-1	5
		0503 Chassis Assembly A27.....	6-1	6
Section	III.	Special Tools List (Not applicable)		
	IV.	Cross-Reference Indexes		
		National Stock Number Index.....	I-1	
		Part Number Index.....	I-3	
		Figure and Item Number Index.....	I-7	

*This manual supersedes TM 11-5820-398-34P, 13 September 1978.

i/(ii blank)



Digitized by the Internet Archive
in 2025 with funding from
Amateur Radio Digital Communications, Grant 151

<https://archive.org/details/tm11582039834p00unse>

SECTION I

INTRODUCTION

1. Scope

This manual lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of direct support and general support maintenance of the AN/PRC-25. It authorizes the requisitioning, issue, and disposition of spares, repair parts and special tools as indicated by the source, maintenance and recoverability (SMR) codes. No parts authorized at organizational maintenance level.

2. General

This Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts list are composed of functional groups in ascending item number sequence. Figure numbers are listed directly beneath the group header.


b. Section III. Special Tools List. Not applicable.

c. Section IV. Cross-Reference Indexes. A list, in National item identification number (NIIN) sequence, of all National stock numbered items appearing in the listing, followed by a list in alphabetic sequence of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance. The figure number and item number index lists figure and item numbers in numeric sequence and cross-references National stock number, Federal Supply Code for Manufacturer and part numbers.

3. Explanation of Columns (Section II and III)

a. Item No. (Column (1)). Indicates the number used to identify items called out in the illustration.

b. SMR Code (Column (2)). The source, maintenance, and recoverability (SMR) code is a five-position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition instruction, as shown in the following breakout:

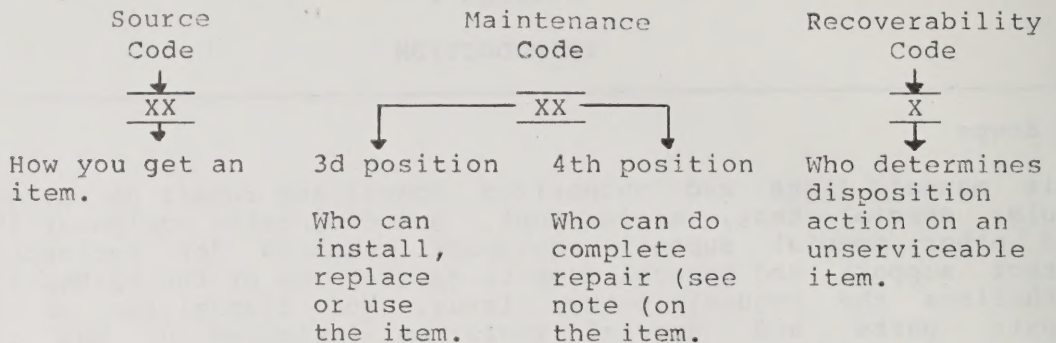

NOTE

Complete repair: Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the "repair" function in a use/user environment in order to restore serviceability to a failed item.

(1) Source code. The source code tells you how to get an item needed for maintenance, repair, or overhaul of an end item/equipment. Explanations of source codes follows:

Code

Explanation

PA
PB
PC
PD
PE
PF
PG

Stocked items: use the applicable NSN to request/requisition items with these source codes. They are authorized to the category indicated by the code entered in the third position of the SMR code.

NOTE

Items coded PC are subject to deterioration.

KD
KF
KB

Items with these codes are not to be requested/requisitioned individually. They are part of a kit which is authorized to the maintenance category indicated in the third position of the SMR code. The complete kit must be requisitioned and applied.

CodeExplanation

MO - Made at
org/AVUM
category
MF - Made at
DS/AVIM
category
MH - Made at GS
category
ML - Made at
Specialized
Repair
Activity
(SRA)
MD - Made at
Depot

Items with these codes are not to be requested/requisitioned individually. They must be made from bulk material which is identified by the part number in the description and usable on code (UOC) column and listed in the Bulk Material group of the repair parts list. If the item is authorized to you by the third position code of the SMR code, but the source code indicates it is made at a higher category, order the item from the higher category of maintenance.

AO - Assembled
by org/AVUM
category
AF - Assembled
by DS/AVIM
category
AH - Assembled
by GS
category
AL - Assembled
by SRA
AD - Assembled
by Depot

Items with these codes are not to be requested/requisitioned individually. The parts that make up the assembled item must be requisitioned or fabricated and assembled at the category of maintenance indicated by the source code. If the third position code of the SMR code authorizes you to replace the item, but the source code indicates the item is assembled at a higher category, order the item from the higher category of maintenance.

CodeExplanation

XA - Do not requisition an "XA" coded item. Order its next higher assembly.
XB - If an "XB" item is not available from salvage, order it using the FCSM and part number given.
XC - Installation drawing, diagram, instruction sheet, field service drawing, that is identified by manufacturer's part number.
XD - Item is not stocked. Order an "XD" coded item through normal supply channels using the FSCM and part number given, if not available.

NOTE

Cannibalization or controlled exchange, when authorized, may be used as a source of supply for items with the above source codes, except for those source coded "XA" or those aircraft support items restricted by requirements of AR 750-1.

(2) Maintenance code. Maintenance codes tell you the category of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the SMR code as follows:

(a) The maintenance code entered in the third position tells you the lowest maintenance category authorized to remove, replace, and use an item. The maintenance code entered in the third position will indicate authorization to one of the following categories of maintenance.

<u>Code</u>	<u>Application/Explanation</u>
C -	Crew or operator maintenance done within organizational or aviation maintenance.
O -	Organizational or aviation unit category can remove, replace, and use the item.
F -	Direct support or aviation intermediate category can remove, replace, and use the item.
H -	General support category can remove, replace, and use the item.
L -	Specialized repair activity can remove, replace, and use the item.
D -	Depot category can remove, replace, and use the item.

(b) The maintenance code entered in the fourth position tells whether or not the item is to be repaired and identifies the lowest maintenance category with the capability to do complete repair (i.e., perform all authorized repair functions). This position will contain one of the following maintenance codes.

NOTE

Some limited repair may be done on the item at a lower category of maintenance, if authorized by the Maintenance Allocation Chart (MAC) and SMR codes.

<u>Code</u>	<u>Application/Explanation</u>
O -	Organizational or aviation unit is the lowest category that can do complete repair of the item.
F -	Direct support or aviation intermediate is the lowest category that can do complete repair of the item.
H -	General support is the lowest category that can do complete repair of the item.
L -	Specialized repair activity (designate the specialized repair activity) is the lowest category that can do complete repair of the item.
D -	Depot is the lowest category that can do complete repair of the item.

<u>Code</u>	<u>Application/Explanation</u>
-------------	--------------------------------

- | | |
|-----|---|
| Z - | Nonreparable. No repair is authorized. |
| B - | No repair is authorized. (No parts or special tools are authorized for the maintenance of a "B" coded item.)
However, the item may be reconditioned by adjusting, lubricating, etc., at the user category. |

(3) Recoverability code. Recoverability codes are assigned to items to indicate the disposition action on unserviceable items. The recoverability code is entered in the fifth position of the SMR Code as follows:

<u>Recoverability codes</u>	<u>Application/Explanation</u>
Z -	Nonreparable item. When unserviceable, condemn and dispose of the item at the category of maintenance shown in the third position of SMR code.
O -	Reparable item. When uneconomically repairable, condemn and dispose of the item at organizational or aviation unit category.
F -	Reparable item. When uneconomically repairable, condemn and dispose of the item at direct support or aviation intermediate category.
H -	Reparable item. When uneconomically repairable, condemn and dispose of the item at general support category.
D -	Reparable item. When beyond lower category repair capability, return to depot. Condemnation and disposal of item not authorized below depot category.
L -	Reparable item. Condemnation and disposal not authorized below specialized repair activity (SRA).
A -	Item requires special handling or condemnation procedures because of specific reasons (e.g., precious metal content, high dollar value, critical material, or hazardous material). Refer appropriate manuals/directives for specific instructions.

c. FSCM (Column (3)). The Federal Supply Code for Manufacturer (FSCM) is a 5-digit numeric code which is used to identify the manufacturer, distributor, or Government agency, etc., that supplies the item.

d. Part Number (Column (4)). Indicates the primary number used by the manufacturer (individual, company, firm, corporation, or Government activity), which controls the design and characteristics of the item by means of its engineering drawings, specifications, standards, and inspection requirements to identify an item or range of items.

NOTE

When you use an NSN to requisition an item, the item you receive may have a different part number from the part ordered.

e. Description and Usable on Code (UOC) (Column (5)). This column includes the following information.

(1) The Federal item name and, when required, a minimum description to identify the item.

(2) The statement "END OF FIGURE" appears just below the last item description in Column (5) for a given figure in both section II and section III

f. Qty (Column (6)). Indicates the quantity of the item used in the breakout shown on the illustration figure, which is prepared for a functional group, subfunctional group, or an assembly. A "V" appearing in this column in lieu of a quantity indicates that the quantity is variable and the quantity may vary from application to application.

4. Explanation of Columns (Section IV)

a. National Stock Number (NSN) Index.

(1) Stock number column. This column lists the NSN by National item identification number (NIIN) sequence. The NIIN consists of the last nine digits of the NSN. When using this column to locate an item, ignore the first four digits of the NSN. When requisitioning items use the complete NSN (13 digits).

(2) Fig. column. This column lists the number of the figure where the item is identified/located. The illustrations are in numerical sequence in sections II and III.

(3) Item column. The item number identifies the item associated with the figure listed in the adjacent Fig. column. This item is also identified by the NSN listed on the same line.

b. Part Number Index. Part numbers in this index are listed by part number in ascending alphameric sequence.

(1) FSCM column. This column lists the Federal supply code for manufacturer.

(2) Part number column. This column indicates the part number assigned to the item.

(3) Stock number column. This column lists the National stock number for the associated part number and manufacturer identified in the part number and FSCM columns to the left.

(4) Fig. column. This column lists the number of the figure where the item is identified/located in sections II and III.

(5) Item column. The item number is that number assigned to the item as it appears in the figure referenced in the adjacent figure number column.

c. Figure and Item Number Index.

(1) Fig. column. This column lists the number of the figure where the item is identified/located in sections II and III.

(2) Item column. The item number is that number assigned to the item as it appears in the figure referenced in the adjacent figure number column.

(3) Stock number column. This column lists the National stock number for the item.

(4) FSCM column. The Federal supply code for manufacturer (FSCM) is a 5-digit numeric code used to identify the manufacturer, distributor, or Government agency, etc., that supplies the item.

(5) Part number column. Indicates the primary number used by the manufacturer (individual, firm, corporation, or Government activity), which controls the design and characteristics of the item by means of its engineering drawings, specifications, standards, and inspection requirements to identify an item or range of item.

5. Special Information

a. Associated Publications. The publications listed below pertain to the AN/PRC-25 and its components:

TM 11-5820-398-12, Radio Set AN/PRC-25 (including Receiver-Transmitter, Radio RT-505/PRC-25)

TM 11-5820-358-20P, Radio Set AN/PRC-25 (To be published)

TM 11-5820-398-35, Radio Set AN/PRC-25

TM 11-5965-257-15, Handset H-138/U

TM 11-5965-280-12, Radio Set H-189/GR

b. National Stock Numbers. National stock numbers (NSN's) that are missing from P source coded items have been applied for and will be added to this TM by future change/revision when they are entered in the Army Master Data File (AMDF). Until the NSN's are established and published, submit exception requisitions to: Commander, US Army Communications-Electronics Command and Fort Monmouth, ATTN: AMSEL-LC-MM, Fort Monmouth, NJ 07703-5000 for the part to support your equipment.

6. How to Locate Repair Parts

a. When National stock number or part number is not known.

(1) First. Using the table of contents, determine the assembly group or subassembly group to which the item belongs. This is necessary since figures are prepared for assembly groups and subassembly groups, and listings are divided into the same groups.

(2) Second. Find the figure covering the assembly group or subassembly group to which the item belongs.

(3) Third. Identify the item on the figure and note the item number.

(4) Fourth. Refer to the Repair Parts List for the figure to find the part number for the item number noted on the figure.

(5) Fifth. Refer to the Part Number Index to find the NSN, if assigned.


b. When National stock number or part number is known.

(1) First. Using the index of National stock numbers and part numbers, find the pertinent National stock number or part number. The NSN index is in National item identification number (NIIN) sequence (para 4a(1)). The part numbers in the part number index are listed in ascending alphameric sequence (para 4b). Both indexes cross-reference you to the illustration figure and item number of the item you are looking for.

(2) Second. After finding the figure and item number, verify that the item is the one you're looking for, then locate the item number in the repair parts list for the figure.

7. Abbreviations

Not applicable.

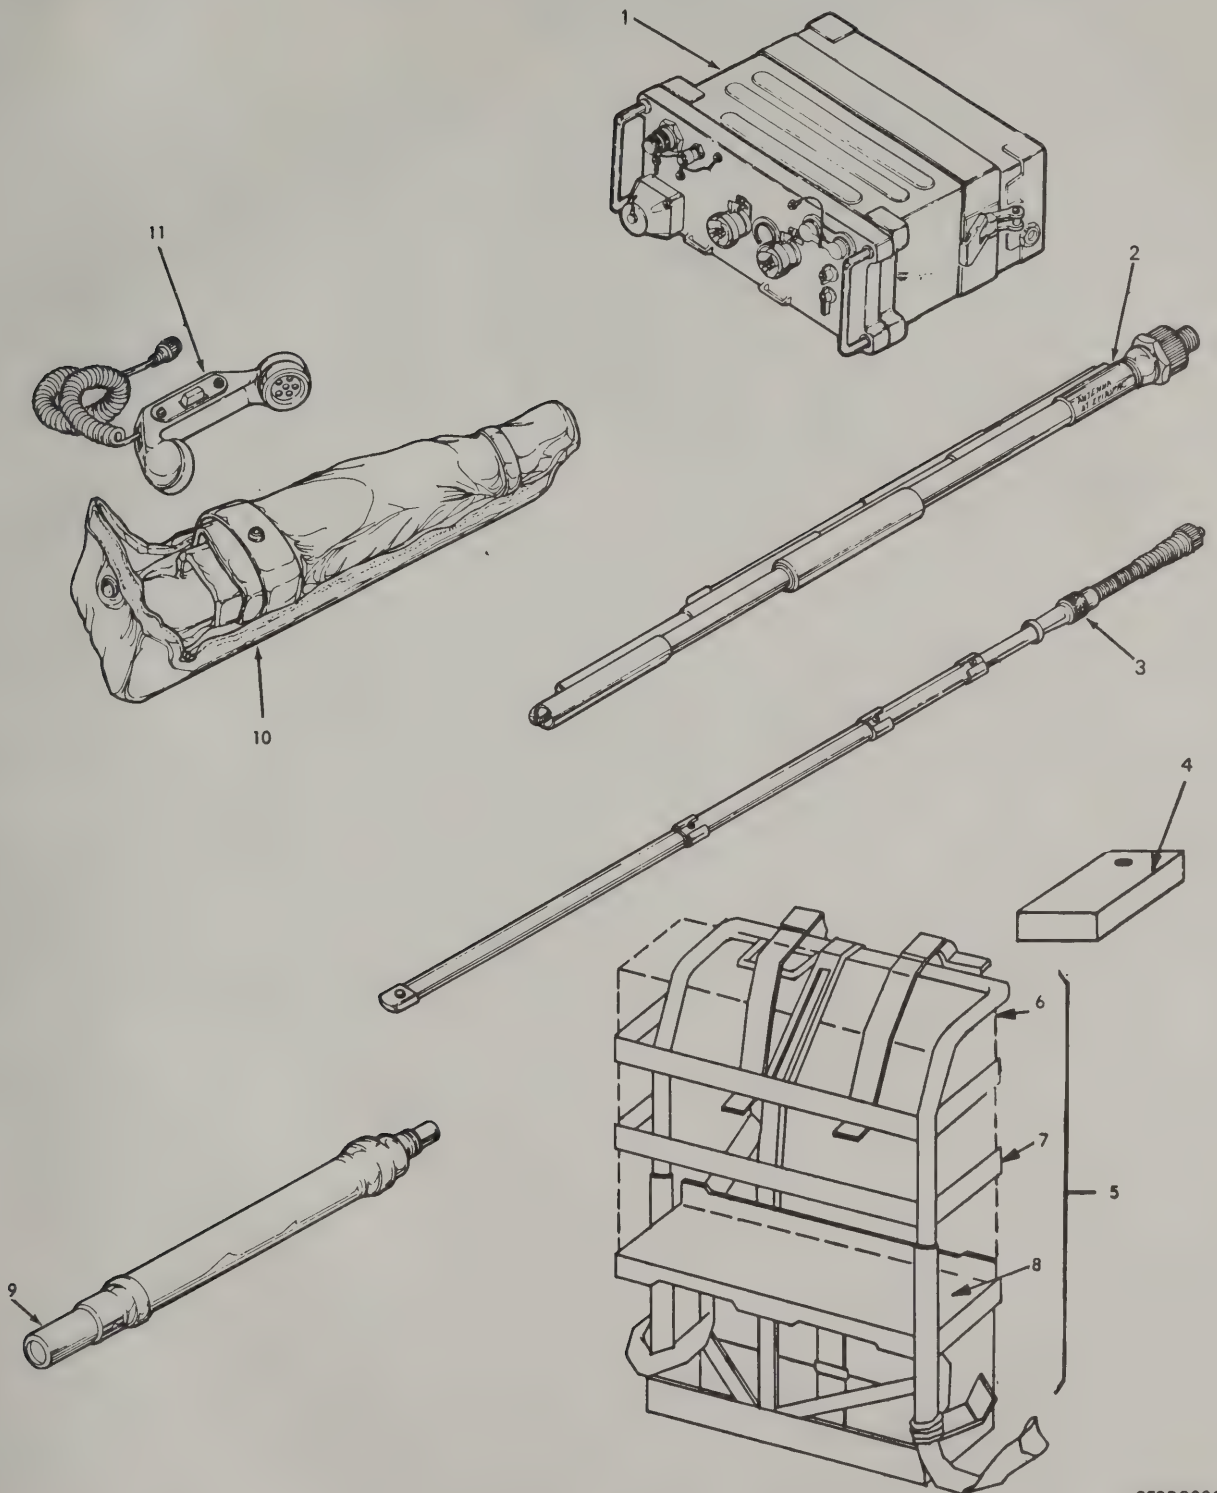

CE0BQ001

Figure 1. Radio Set AN/PRC-25


SECTION II			TM11-5820-398-34P		
(1)	(2)	(3)	(4)	(5)	(6)
ITEM	SMR		PART		
NO	CODE	FSCM	NUMBER	DESCRIPTION AND USABLE ON CODES(UOC)	QTY

GROUP 00 RADIO SET AN/PRC-25

FIGURE 1

1	PA0DD	80058	RT-505/PRC-25	RECEIVER-TRANSMITTE (SEE FIGURE 3 FOR BREAKDOWN).....	1
2	PA0ZZ	80058	AT-271A/PRC	ANTENNA (SEE FIGURE 2 FOR BREAKDOWN).....	1
3	PA0ZZ	80058	AT-892/PRC-25	ANTENNA.....	1
4	PCOZA	80058	BA4386PRC25	BATTERY, DRY.....	1
4	PCOZA	80058	BA-5598/U	BATTERY, NONRECHARG (FOR ARTIC USE)	1
5	PA0ZZ	80058	ST-138/PRC-25	HARNESS, ELECTRICAL.....	1
6	PA000	81349	MIL-S-43835	FRAME, FIELD PACK.....	1
7	XBOZZ	81349	MIL-S-43828	STRAP, WEBBING.....	1
8	XBOZZ	81349	MIL-F-43834	SHELF, CARGO, SUPPORT.....	1
9	PA0ZZ	80058	AB-591/PRC-25	SUPPORT, ANTENNA.....	1
10	PA0ZZ	80058	CW-503/PRC-25	BAG, ACCESSORY.....	1
11	PA0ZZ	80063	SM-C-544246	MICROPHONE ELEMENT.....	1


END OF FIGURE

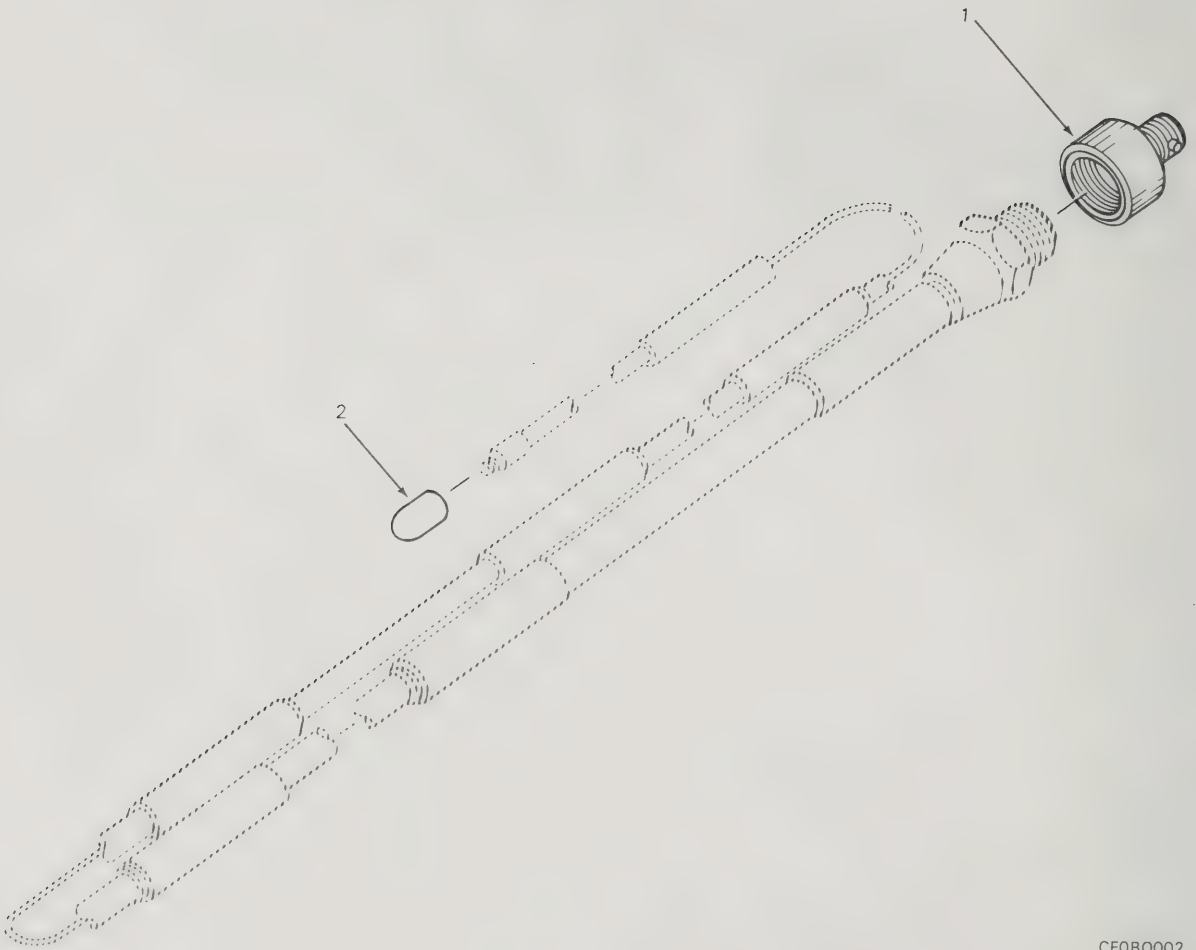

CE0BQ002

Figure 2. Antenna AT-271A/PRC

SECTION II			TM11-5820-398-34P	(5)	(6)
(1)	(2)	(3)	(4)		
ITEM	SMR		PART	DESCRIPTION AND USABLE ON CODES(UOC)	QTY
NO	CODE	FSCM	NUMBER		
GROUP 01 ANTENNA AT-271A/PRC					
FIGURE 2					
1	PAOZZ 80063	SM-B-182386		ADAPTER, ANTENNA TO.....	1
2	PAOZZ 80063	SM-B-91329		CAP.....	1
END OF FIGURE					

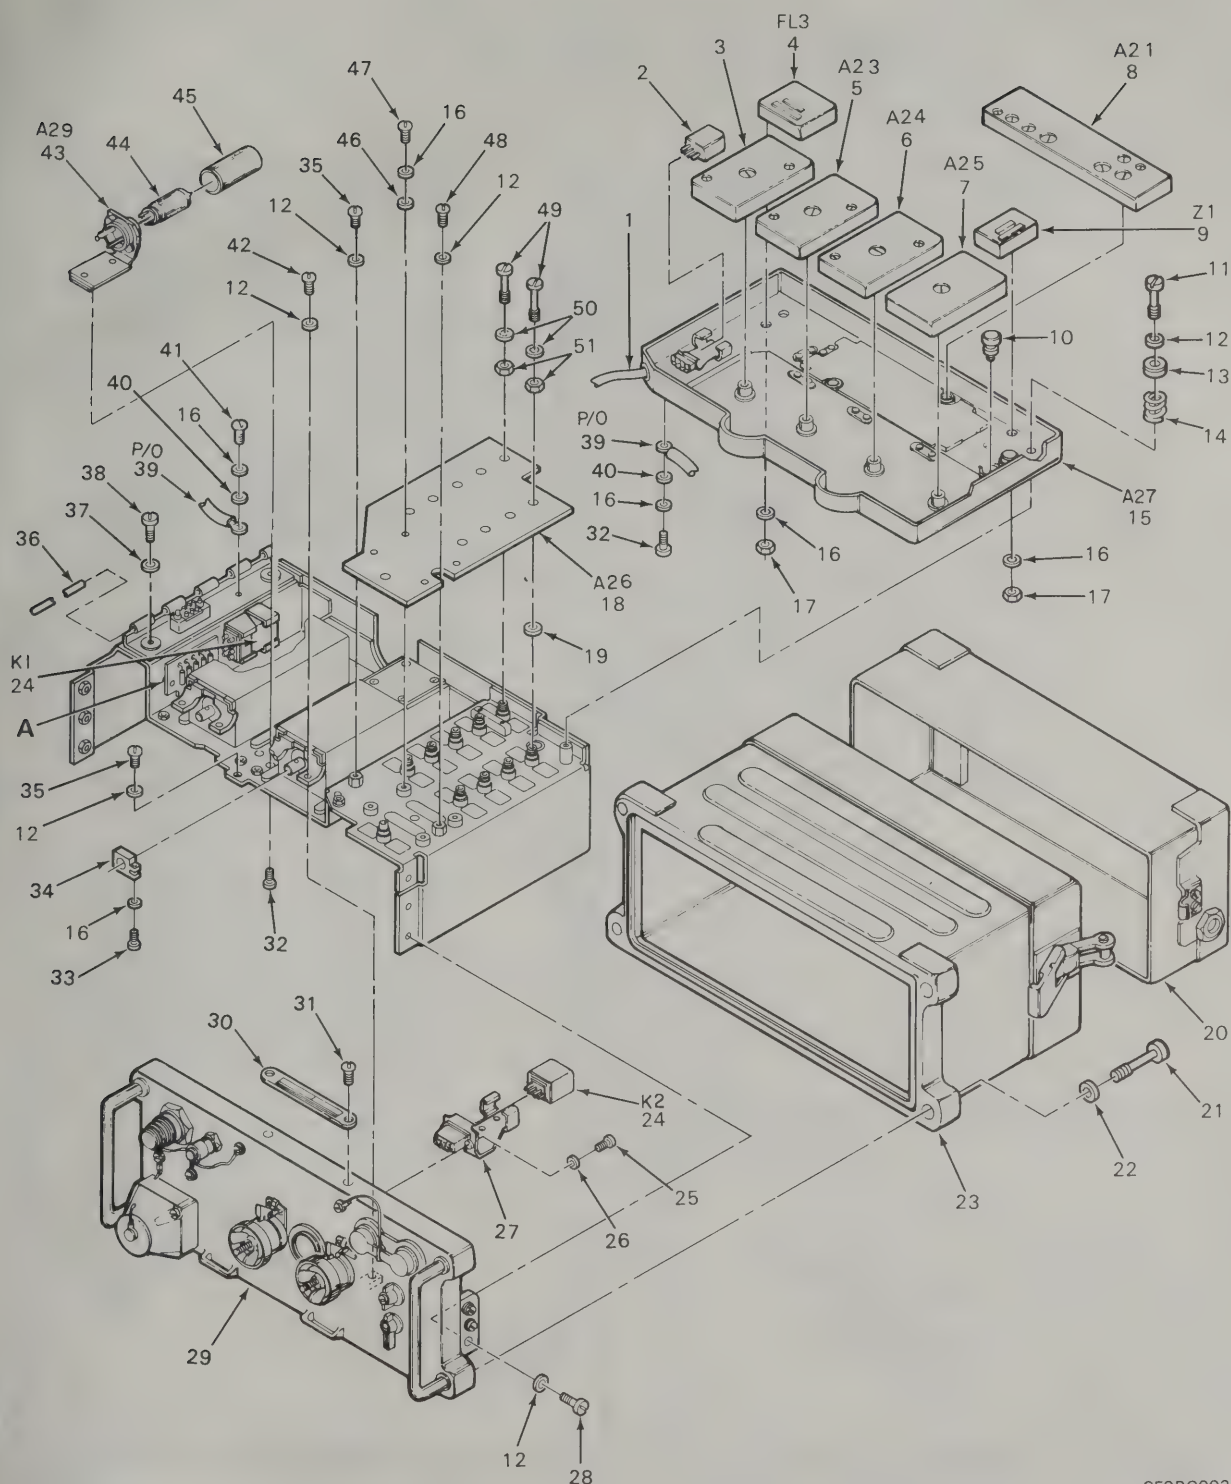

CE0BQ003

Figure 3. Receiver-Transmitter RT-505/PRC-25 (Sheet 1 of 2)

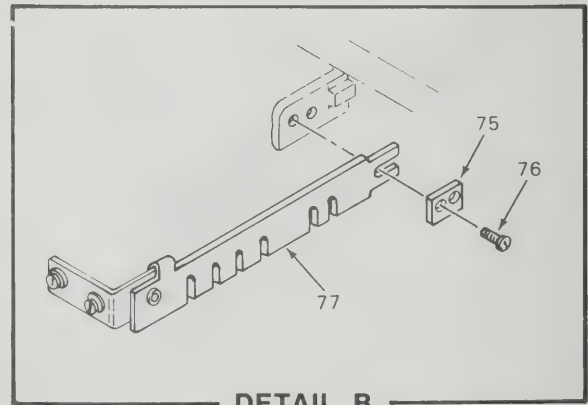
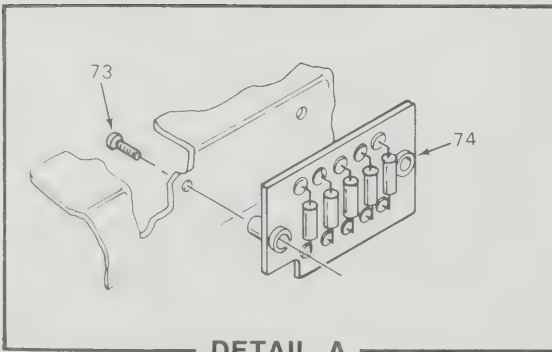
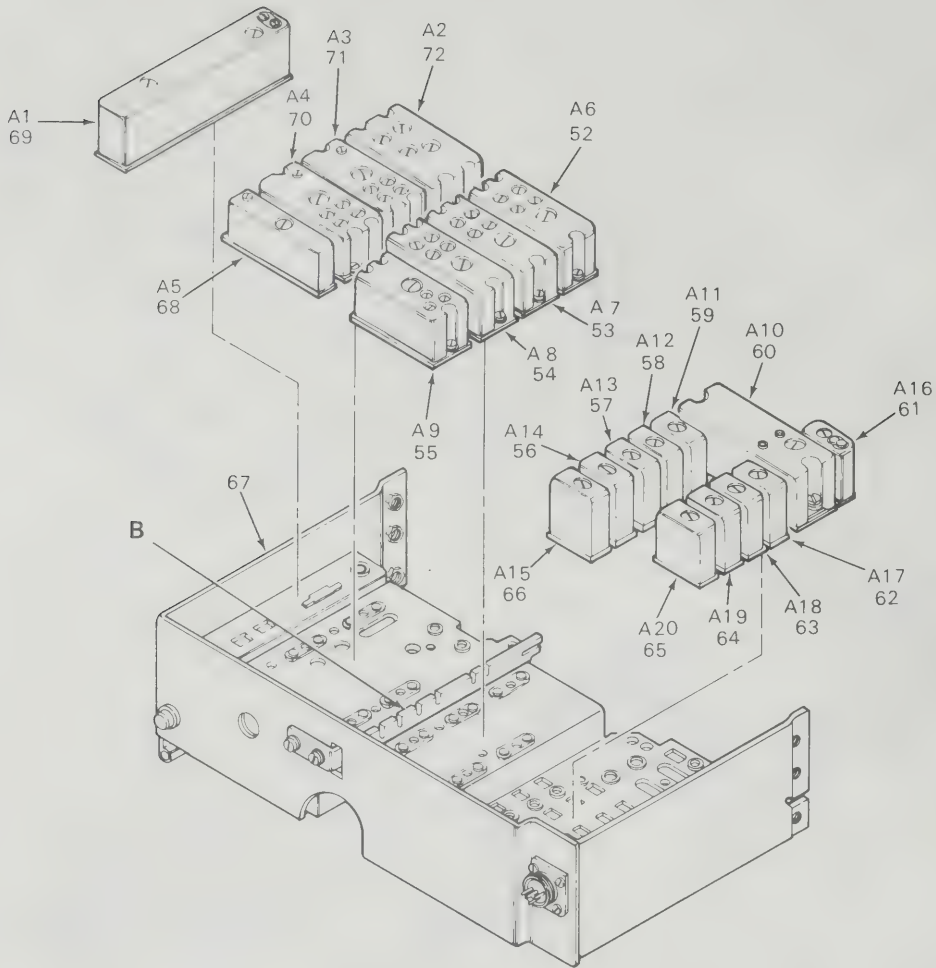


Figure 3. Receiver-Transmitter RT-505/PRC-25 (Sheet 2 of 2)

SECTION II			TM11-5820-398-34P		(5)	(6)
(1)	(2)	(3)	(4)			
ITEM	SMR		PART	DESCRIPTION AND USABLE ON CODES(UOC) QTY		
NO	CODE	FSCM	NUMBER			

GROUP 05 RECEIVER-TRANSMITTER
RT-505/PRC-25

FIGURE 3

1	XBDZZ	80063	SM-D-447781	WIRING ASSEMBLY,RT-.....	1
2	PAFZZ	80063	SM-C-447085	RELAY,ELECTROMAGNET.....	1
3	PAFZZ	80063	SM-D-447314	AMPLIFIER,AUDIO FRE.....	1
4	PAFZZ	80063	SM-D-447251	FILTER,BAND PASS.....	1
5	PAFZZ	80063	SM-D-447316	GENERATOR,REFERENCE.....	1
6	PAFZZ	80063	SM-D-447318	tone SQUELCH ASSEMB.....	1
7	PAFZZ	80063	SM-D-447113	AMPLIFIER,AUDIO FRE.....	1
8	PAFZZ	80063	SM-D-447177	AMPLIFIER,INTERMEDI.....	1
9	PAFZZ	80063	SM-D-447353	DISCRIMINATOR,ELECT.....	1
10	PAHZZ	80063	SM-B-447784	KNOB.....	2
11	PAHZZ	80063	SM-B-447066-3	SCREW,EXTERNALLY RE.....	3
12	PAHZZ	96906	MS35338-41	WASHER,LOCK.....	17
13	PAHZZ	80063	SM-B-447930	WASHER,RECESSED.....	3
14	PAHZZ	96906	MS24585C238	SPRING,HELICAL,COMP.....	3
15	PAFZZ	80063	SM-D-447472	RECEIVER SUBASSEMBL.....	1
16	PAFZZ	96906	MS35338-40	WASHER,LOCK.....	12
17	PAFZZ	96906	MS35649-242	NUT,PLAIN,HEXAGON.....	4
18	PAHZZ	80063	SM-D-447593	BACKPLANE ASSEMBLY.....	1
19	PAHZZ	80063	SM-B-447043-1	SHIM.....	5
20	PAOZZ	80063	SMD447322	BATTERY BOX (SEE FIGURE 4 FOR BREAKDOWN).....	1
21	PAFZZ	80063	SM-B-447224	SCREW,EXTERNALLY RE.....	4
22	XBFZZ	80063	SM-B-447694-2	WASHER,LOCK.....	4
23	PAOHH	80063	SM-D-447351	CASE,RECEIVER-TRANS.....	1
24	XBHZZ	71482	RY4YY1A3P	RELAY,CRYSTAL CAN.....	2
25	PAHZZ	96906	MS35206-203	SCREW,MACHINE.....	2
26	PAHZZ	96906	MS35338-39	WASHER,LOCK.....	2
27	XBHZZ	80063	SM-C-875638	SOCKET,RELAY.....	1
28	PAHZZ	96906	MS35206-225	SCREW,MACHINE.....	6
29	PAHZZ	80063	SM-D-449063	PANEL ASSEMBLY (SEE FIGURE 5 FOR BREAKDOWN).....	1
30	MDHZZ	80063	SM-B-447249	PLATE IDENTIFICATIO (FOR INSTRUCTIONS SEE SB 11-631.).....	1
31	XBHZZ	80063	SMB447445-7	SCREW,EXTERNALY RE.....	2
32	PAHZZ	96906	MS35206-212	SCREW,MACHINE.....	4
33	PAHZZ	96906	MS16995-9	SCREW,CAP,SOCKET HE.....	2
34	PAHZZ	80063	SM-B-447575	CLAMP,HUB.....	2
35	PAHZZ	96906	MS35223-27	SCREW,MACHINE.....	2
36	PAHZZ	80063	SM-C-447121-3	PIN,STRAIGHT,HEADLE.....	1
37	PAHZZ	96906	MS35338-156	WASHER,LOCK.....	2
38	PAHZZ	80063	SM-B-447066-4	SCREW,EXTERNALLY RE.....	2
39	PAHZZ	80063	SM-B-447771	LEAD,ELECTRICAL.....	1
40	PAHZZ	96906	MS35335-85	WASHER,LOCK.....	2
41	PAHZZ	96906	MS35223-13	SCREW,MACHINE.....	1
42	PAHZZ	96906	MS35206-228	SCREW,MACHINE.....	4
43	PAHZA	80063	SM-D-447425	POWER AMPLIFIER ASY.....	1
44	XBHZZ	80063	SM-B-447721-46	TUBE,VACUUM.....	1

SECTION II			TM11-5820-398-34P		(5)	(6)
(1)	(2)	(3)	(4)			
ITEM	SMR		PART			
NO	CODE	FSCM	NUMBER	DESCRIPTION AND USABLE ON CODES(UOC)		QTY
45	PAHZZ	81349	M24251-6-5	SHIELD,ELECTRON TUB.....		1
46	PAHZZ	96906	MS27183-3	WASHER,FLAT.....		4
47	PAHZZ	96906	MS35206-214	SCREW,MACHINE.....		4
48	PAHZZ	80063	SM-B-447019	SCREW,EXTERNALLY RE.....		2
49	PAHZZ	80063	SM-B-447958	SCREW,ASSEMBLED WAS.....		10
50	XBHZZ	80063	SM-B-447721-69	WASHER,LOCK.....		10
51	PAHZZ	80063	SM-B-447960	NUT,PLAIN,HEXAGON.....		10
52	PAFZZ	80063	SM-D-447557	AMPLIFIER SUBASSEMB.....		1
53	PAFZZ	80063	SM-D-447558	AMPLIFIER,RADIO FRE.....		1
54	PAFZZ	80063	SM-D-447559	AMPLIFIER,RADIO FRE.....		1
55	PAFZZ	80063	SM-D-447554	OSCILLATOR,CRYSTAL.....		1
56	PAFZZ	80063	SM-D-621272	MIXER STAGE,FREQUEN.....		1
57	PAFZZ	80063	SM-D-447448	FILTER,BAND PASS.....		1
58	PAFZZ	80063	SM-D-447447	MIXER STAGE,FREQUEN.....		1
59	PAFDD	80063	SM-D-447446	DISCRIMINATOR,ELECT.....		1
60	PAFZZ	80063	SM-D-447407	GENERATOR,PULSE.....		1
61	PAFZZ	80063	SM-D-447451	REGULATOR,VOLTAGE.....		1
62	PAFZZ	80063	SM-D-447452	COMPARATOR,SIGNAL.....		1
63	XBFZZ	80063	SM-D-447453	AMPLIFIER ASSEMBLY.....		1
64	PAFZZ	80063	SM-D-447454	QUARTER WAVE NETWORK.....		1
65	PAFZZ	80063	SM-D-447455	AMPLIFIER-OSCILLATO.....		1
66	PAFZZ	80063	SM-D-447450	OSCILLATOR,CRYSTAL.....		1
67	XDDDD	80063	SM-D-447131	CHASSIS ASSEMBLY (SEE FIGURE 6 FOR BREAKDOWN).....		1
68	PAFZZ	80063	SM-D-447462	MIXER STAGE,FREQUEN.....		1
69	PAFZZ	80063	SM-C-447269	POWER SUPPLY.....		1
70	PAFZZ	80063	SM-D-447556	AMPLIFIER,RADIO FRE.....		1
71	PAFZZ	80063	SM-D-447555	AMPLIFIER,RADIO FRE.....		1
72	PAFZZ	80063	SM-D-447620	AMPLIFIER SUBASSEMB.....		1
73	PADZZ	96906	MS35206-202	SCREW,MACHINE.....		2
74	PAHZZ	80063	SM-C-447795	NETWORK,DECOUPLING.....		1
75	XBDZZ	80063	SM-B-447785	PLATE,WASHER.....		1
76	PADZZ	80063	SM-B-447786	SCREW,CAP,SOCKET HE.....		2
77	XBDZZ	80063	SM-C-447601	BAR ASSEMBLY.....		1

END OF FIGURE

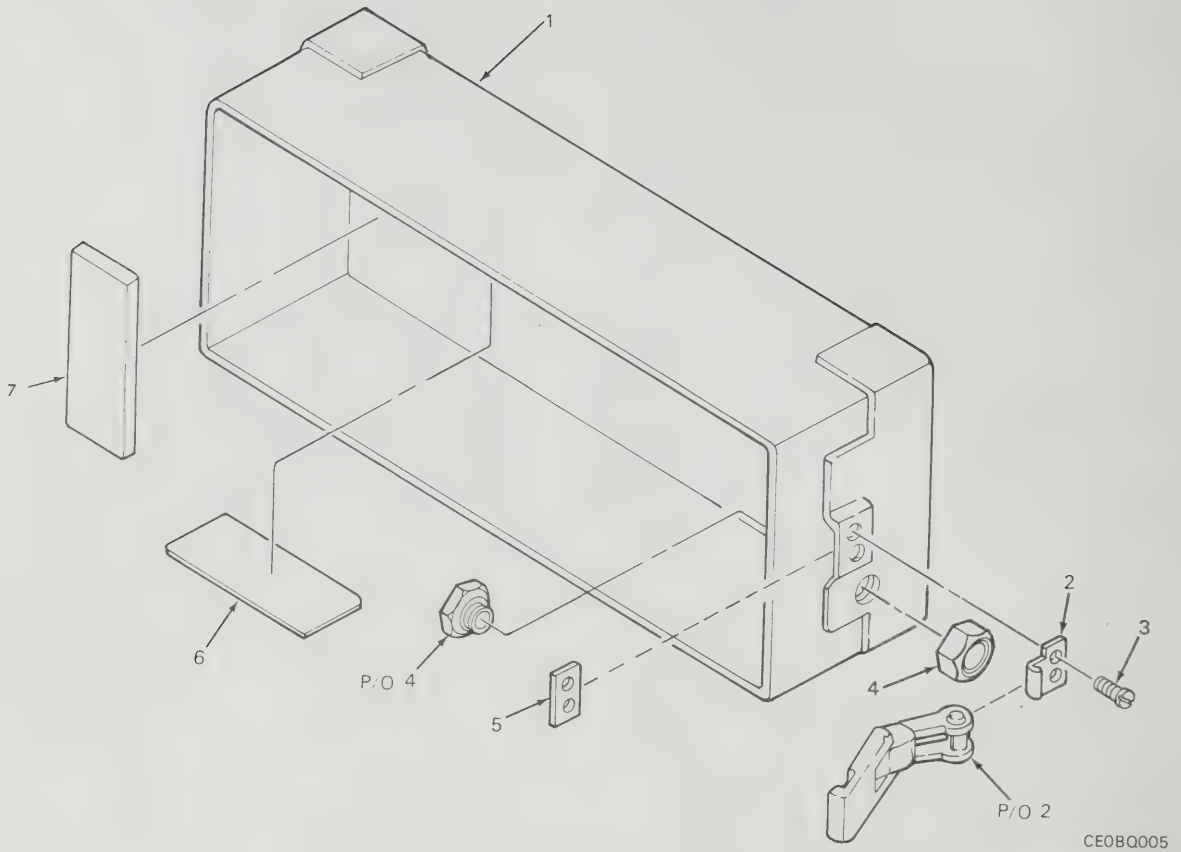


Figure 4. Battery Box Assembly CY-2562/PRC-25


SECTION II			TM11-5820-398-34P	(5)	(6)
(1)	(2)	(3)	(4)		
ITEM	SMR		PART	DESCRIPTION AND USABLE ON CODES(UOC)	QTY
NO	CODE	FSCM	NUMBER		

GROUP 0501 BATTERY BOX ASSEMBLY
CY-2562/PRC-25

FIGURE 4


1	XBFZZ	80063	SMD447264	CASE ASSEMBLY.....	1
2	PAFZZ	80063	SM-C-447321-2	STRIKE,CATCH.....	2
3	XBFZZ	80063	SM-B-447348-1	SCREW,MACHINE.....	4
4	PAOZZ	80063	SM-D-447322-1	VALVE,SAFETY RELIEF.....	1
5	PAFZZ	80063	SM-B-447265	NUT,PLATE.....	2
6	PAFZZ	80063	SM-B-447461	PLATE,IDENTIFICATIO.....	1
7	PAOZZ	80063	SM-B-447320	PAD,CUSHIONING.....	2

END OF FIGURE

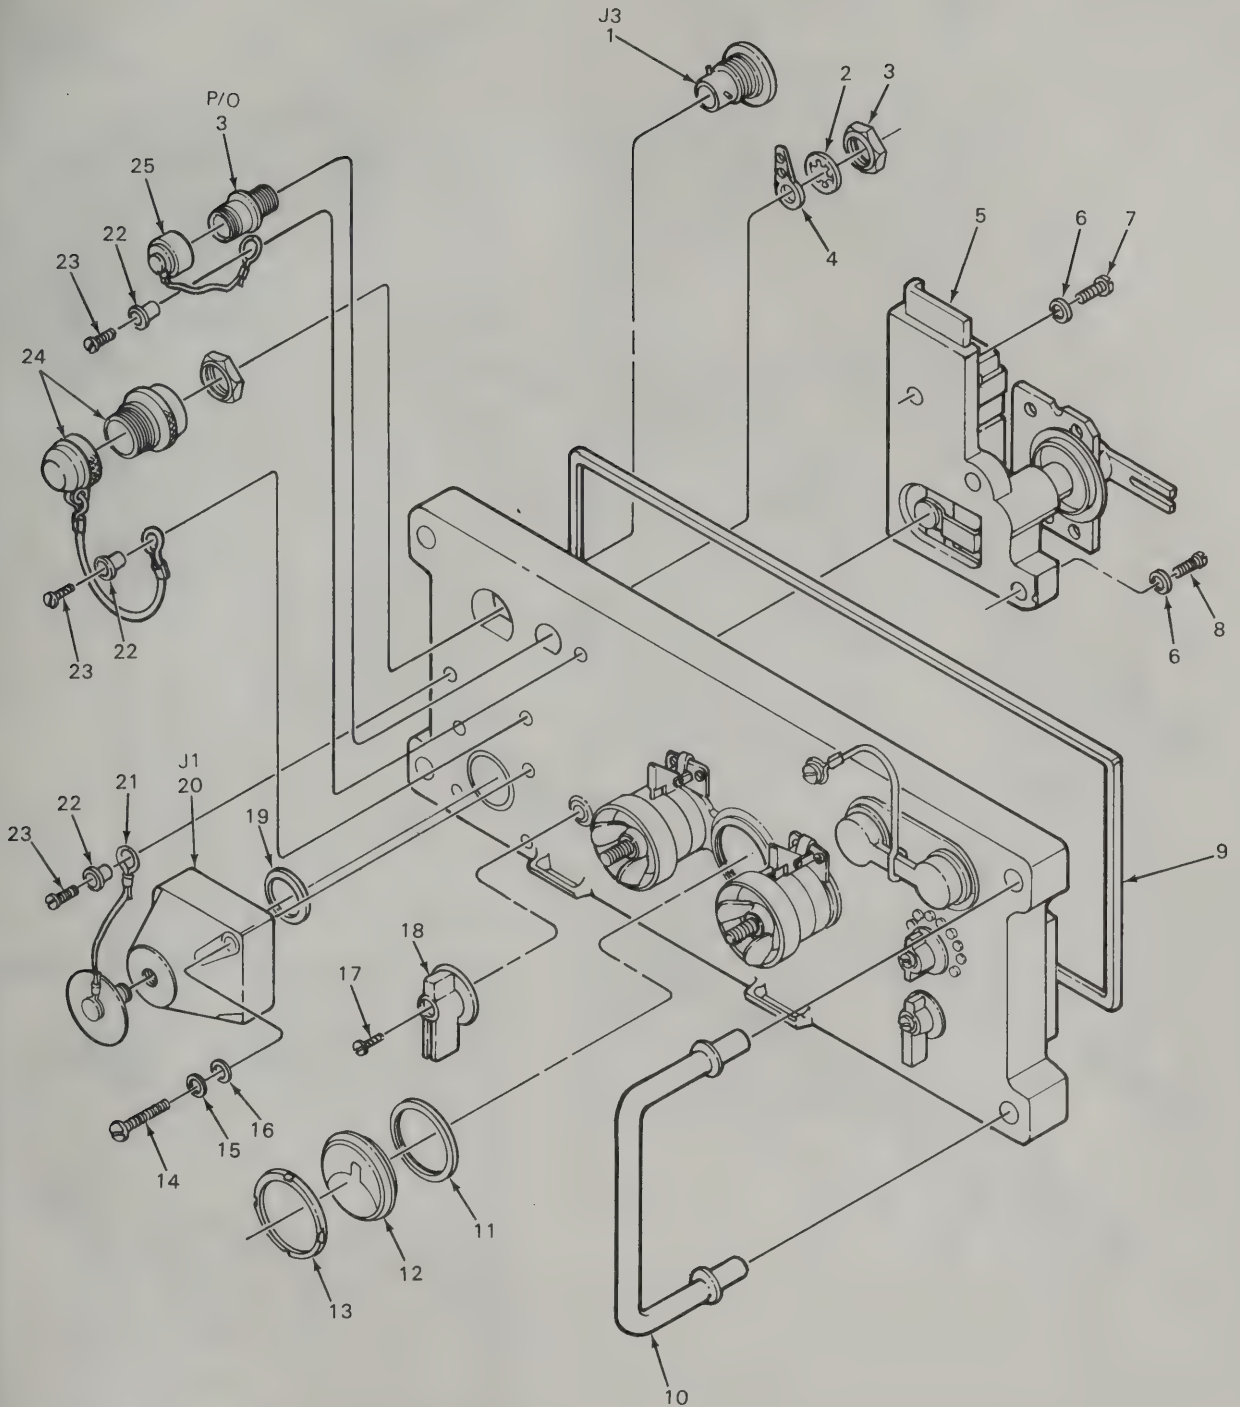

CE0BQ006

Figure 5. Front Panel Assembly A30 (Sheet 1 of 2)

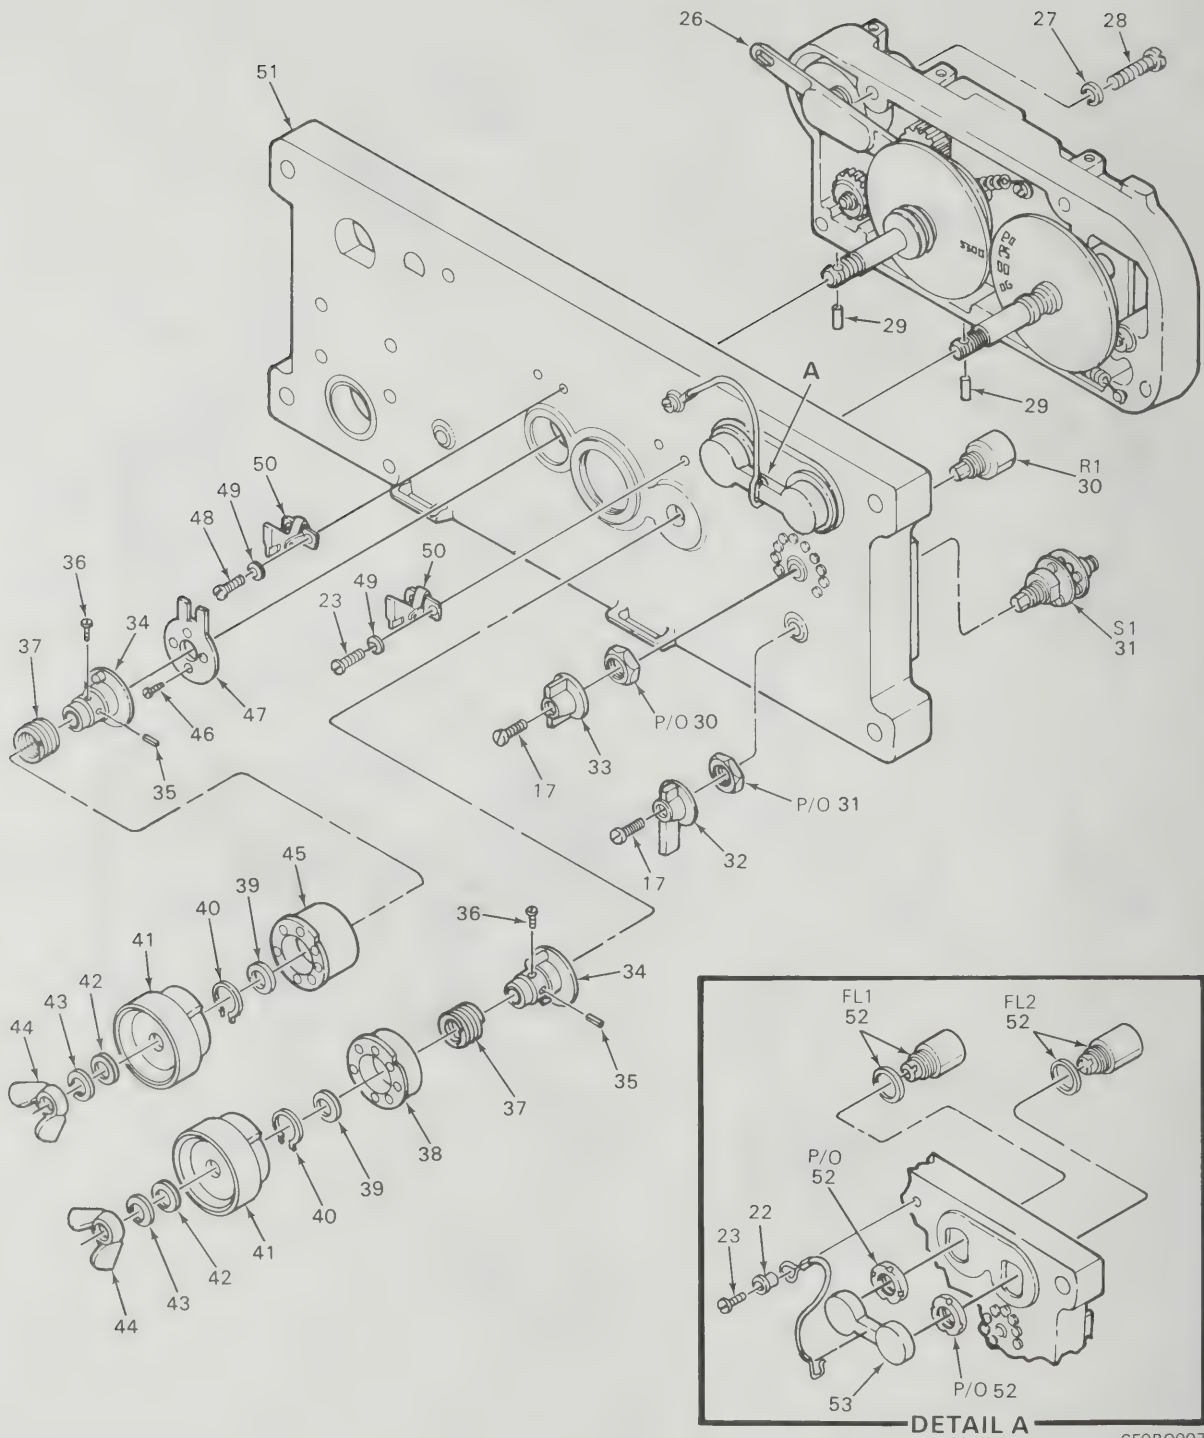

CE0BQ007

Figure 5. Front Panel Assembly A30 (Sheet 2 of 2)

SECTION II			TM11-5820-398-34P		
(1)	(2)	(3)	(4)	(5)	(6)
ITEM	SMR		PART		
NO	CODE	FSCM	NUMBER	DESCRIPTION AND USABLE ON CODES(UOC)	QTY


GROUP 0502 FRONT PANEL ASSEMBLY
A30

FIGURE 5

1	PAHZZ	80058	U-318/U	CONNECTOR, RECEPTAC	1
2	PAHZZ	96906	MS35333-110	WASHER, LOCK	1
3	PAHZZ	80058	UG-1873/U	CONNECTOR, RECEPTAC	1
4	XBHZZ	80063	SM-B-447725	TERMINAL, LUG	1
5	PAHZZ	80063	SM-D-447313	NETWORK, IMPEDENCE, M	1
6	PAHZZ	96906	MS35338-135	WASHER, LOCK	3
7	PAHZZ	96906	MS-51957-14	SCREW, MACHINE	1
8	PAHZZ	96906	MS-51957-16	SCREW, MACHINE	2
9	PAFZZ	80063	SM-B-447355	GASKET	1
10	PAFZZ	80063	SM-B-447221	HANDLE, BOW	2
11	PAHZZ	80063	SM-B-447223	GASKET	1
12	PAHZZ	80063	SM-B-447225	WINDOW, DIAL	1
13	PAHZZ	80063	SM-B-447222	BEZEL, INSTRUMENT MO	1
14	XBFZZ	80063	SM-B-447445-6	SCREW, MACHINE	4
15	PAFZZ	80063	SM-B-447694-4	WASHER, LOCK	4
16	PAFZZ	80063	SM-B-447694-6	WASHER, FLAT	4
17	XBOZZ	80063	SM-B-447445-5	SCREW, MACHINE	3
18	PAOZZ	96906	MS91525-2AP3SOZ	KNOB	1
19	PAFZZ	96906	MS28775-020	PACKING, PREFORMED	1
20	PAFZZ	80063	SM-C-447102	CONNECTOR, RECEPTAC	1
21	PAOZZ	80063	SM-B-447439	COVER, ELECTRICAL CO	1
22	PAOZZ	80063	SM-B-447392	BUSHING, SLEEVE	4
23	PAOZZ	80063	SM-B-447445-4	SCREW, MACHINE	6
24	PAHZZ	80058	U-317/U	CONNECTOR, PLUG, ELEC	1
25	PAOZZ	80063	SM-C-447403	COVER, ELECTRICAL CO	1
26	PAHZZ	80063	SM-D-447350	DRIVE, TUNING	1
27	PAHZZ	96906	MS35338-41	WASHER, LOCK	5
28	XBHZZ	80063	SM-B-447968	SCREW, MACHINE	5
29	PAHZZ	80063	SM-B-447302-2	PIN, SPRING	2
30	XBHZZ	71590	BA1401-003	RESISTOR, VARIABLE, N	1
31	PAHZZ	80063	SM-C-447094	SWITCH, ROTARY	1
32	PAOZZ	80063	SM-C-447052	KNOB	1
33	XBOZZ	96906	MS91524	KNOB, RADIO	1
34	PAOZZ	80063	SM-C-447287	SLEEVE ASSEMBLY, TRA	2
35	PAOZZ	80063	SM-B-447302-3	PIN, SPRING	2
36	PAOZZ	96906	MS51981-8	SETSCREW	2
37	PAOZZ	80063	SM-B-447304	SPRING, HELICAL, COMP	2
38	PAOZZ	80063	SM-C-447976-1	KNOB	1
39	PAOZZ	80063	SM-B-447303	WASHER, FLAT	2
40	PAOZZ	96906	MS16624-1037	RING, RETAINING	2
41	PAOZZ	80063	SM-C-447306	KNOB	2
42	XBOZZ	80063	SM-B-447107-5	WASHER, FLAT	2
43	PAOZZ	80063	SM-B-447694-1	WASHER, LOCK	2
44	PAOZZ	80063	SM-B-447308	NUT, PLAIN, WING	2
45	PAOZZ	80063	SM-C-447976-2	KNOB	1
46	PAHZZ	96906	MS51959-2	SCREW, MACHINE	4
47	PAHZZ	80063	SM-B-447299	PLATE, MOUNTING, TRAN	1

SECTION II			TM11-5820-398-34P			
(1)	(2)	(3)	(4)		(5)	(6)
ITEM	SMR		PART			
NO	CODE	FSCM	NUMBER	DESCRIPTION AND USABLE ON CODES(UOC) QTY		
48	XBHZZ	80063	SM-B-447445-3	SCREW,MACHINE..... 2		
49	PAHZZ	80063	SM-B-447694-3	WASHER, LOCK..... 4		
50	PAHZZ	80063	SM-C-447307	DIAL-KNOB LOCK,ELEC..... 2		
51	PAFZZ	80063	SM-D-449063	PANEL ASSEMBLY..... 1		
52	PAHZZ	80063	SM-D-447367	FILTER,RADIO INTERF..... 2		
53	PAOZZ	80063	SM-B-447440	CAP,PROTECTIVE,DUST..... 1		

END OF FIGURE

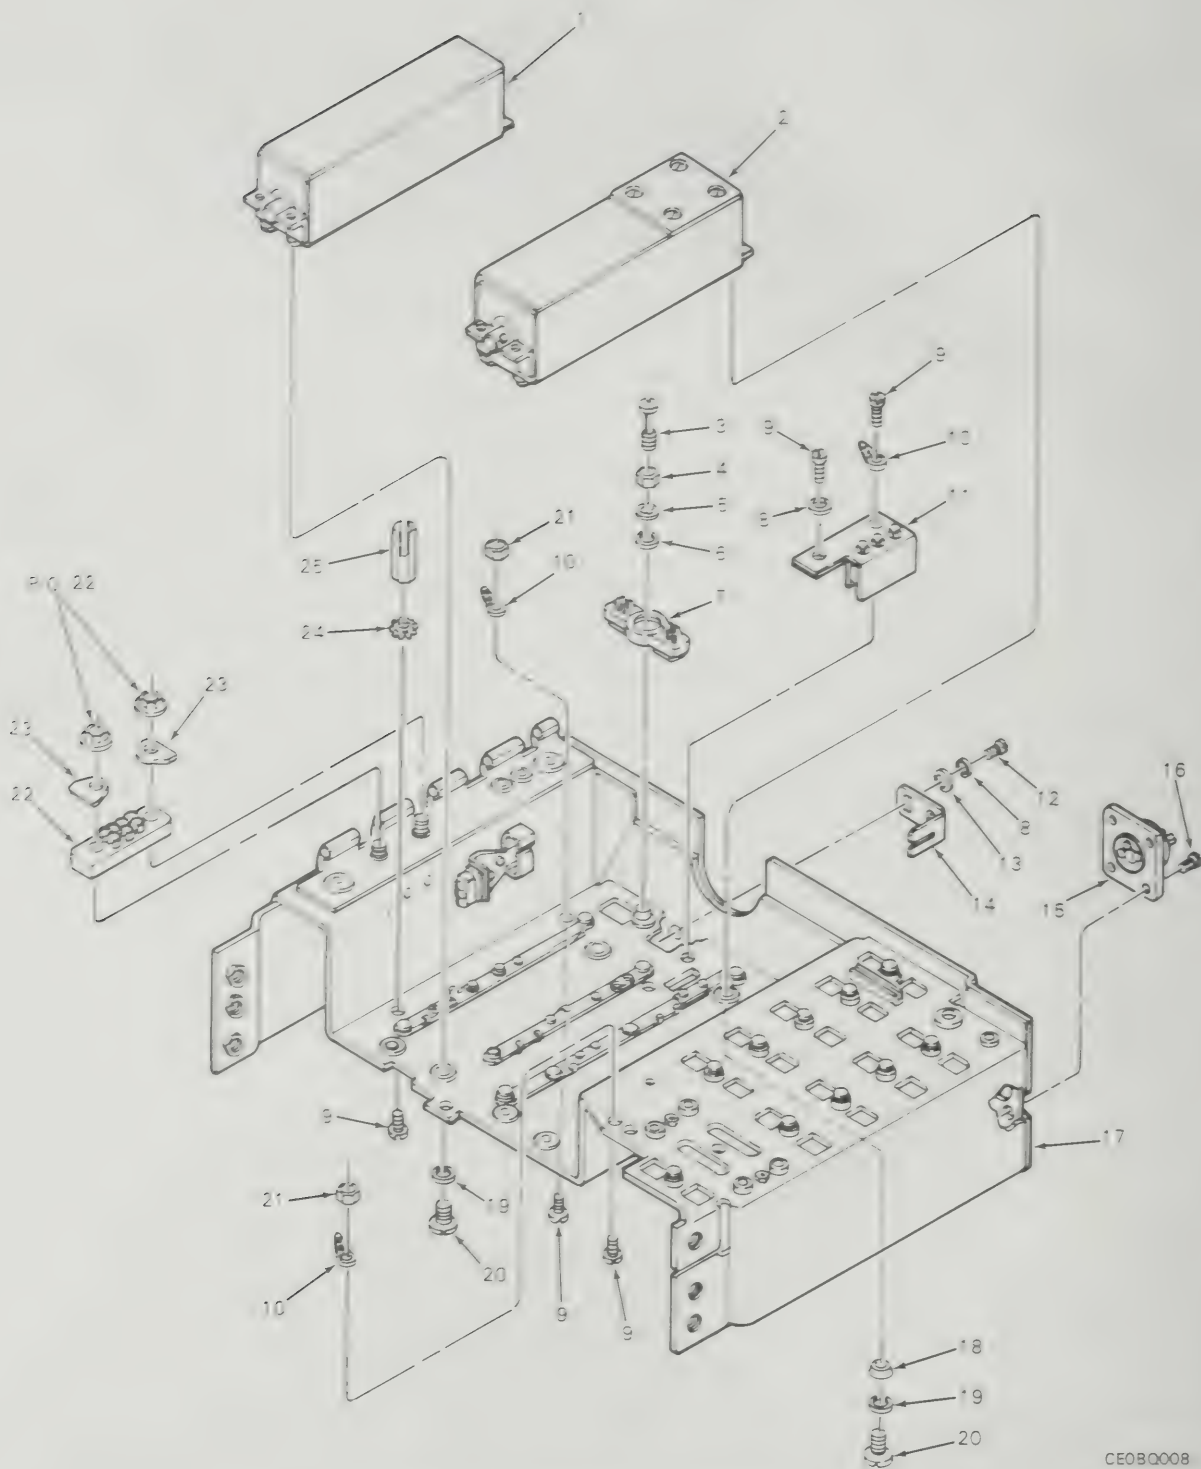

CE0BQ008

Figure 6. Chassis Assembly A27

SECTION II			TM11-5820-398-34P			
(1)	(2)	(3)	(4)	(5)	(6)	
ITEM	SMR		PART			
NO	CODE	FSCM	NUMBER	DESCRIPTION AND USABLE ON CODES(UOC) QTY		
GROUP 0503 CHASSIS ASSEMBLY A27						
FIGURE 6						
1	PAHZZ	80063	SM-D-447137	CAPACITOR,VARIABLE,.....		1
2	PAHZZ	80063	SM-D-447138	CAPACITOR,VARIABLE,.....		1
3	PAHZZ	80063	SM-B-447958	SCREW,ASSEMBLED WAS.....		1
4	PAHZZ	80063	SM-B-447960	NUT,PLAIN,HEXAGON.....		1
5	PAHZZ	78189	1210-06	WASHER,LOCK.....		1
6	PAHZZ	80063	SM-B-447043-2	SPACER,RING.....		1
7	PAHZZ	80063	SM-D-447180	CONNECTOR,PLUG,ELEC.....		1
8	PAHZZ	96906	MS35338-40	WASHER,LOCK.....		3
9	PAHZZ	96906	MS35206-212	SCREW,MACHINE.....		5
10	PAHZZ	78189	2204-04-00	TERMINAL,LUG.....		3
11	PAHZZ	80063	SM-B-447661	SWITCH SUBASSEMBLY.....		1
12	PAHZZ	96906	MS35223-13	SCREW,MACHINE.....		2
13	PAHZZ	96906	MS27183-4	WASHER,FLAT.....		2
14	XBHZZ	80063	SM-B-447971	SUPPORT.....		1
15	PAHZZ	80063	SM-C-447075	CONNECTOR,RECEPTACL.....		1
16	PAHZZ	96906	MS35206-214	SCREW,MACHINE.....		4
17	XBDZZ	80063	SM-D-447352	CHASSIS ASSEMBLY.....		1
18	PAHZZ	80063	SM-B-447665	WASHER,SPRING TENSIL.....		2
19	PAHZZ	96906	MS35338-41	WASHER,LOCK.....		6
20	PAHZZ	96906	MS35206-225	SCREW,MACHINE.....		6
21	PAHZZ	96906	MS35649-242	NUT,PLAIN,HEXAGON.....		2
22	PAHZZ	95238	SM7-20SGDF	CONNECTOR,RECEPTACL.....		1
23	XBHZZ	80063	SM-B-447951	WASHER,SPECIAL.....		2
24	PAHZZ	96906	MS35335-85	WASHER,LOCK.....		1
25	PAHZZ	80063	SM-B-447766	TERMINAL,STUD.....		1

END OF FIGURE

TM11-5820-398-34P

STOCK NUMBER

NATIONAL STOCK NUMBER INDEX		
FIG.	ITEM	STOCK NUM
1	1000	1000
2	2000	2000
3	3000	3000
4	4000	4000
5	5000	5000
6	6000	6000
7	7000	7000
8	8000	8000
9	9000	9000
10	10000	10000
11	11000	11000
12	12000	12000
13	13000	13000
14	14000	14000
15	15000	15000
16	16000	16000
17	17000	17000
18	18000	18000
19	19000	19000
20	20000	20000
21	21000	21000
22	22000	22000
23	23000	23000
24	24000	24000
25	25000	25000
26	26000	26000
27	27000	27000
28	28000	28000
29	29000	29000
30	30000	30000
31	31000	31000
32	32000	32000
33	33000	33000
34	34000	34000
35	35000	35000
36	36000	36000
37	37000	37000
38	38000	38000
39	39000	39000
40	40000	40000
41	41000	41000
42	42000	42000
43	43000	43000
44	44000	44000
45	45000	45000
46	46000	46000
47	47000	47000
48	48000	48000
49	49000	49000
50	50000	50000
51	51000	51000
52	52000	52000
53	53000	53000
54	54000	54000
55	55000	55000
56	56000	56000
57	57000	57000
58	58000	58000
59	59000	59000
60	60000	60000
61	61000	61000
62	62000	62000
63	63000	63000
64	64000	64000
65	65000	65000
66	66000	66000
67	67000	67000
68	68000	68000
69	69000	69000
70	70000	70000
71	71000	71000
72	72000	72000
73	73000	73000
74	74000	74000
75	75000	75000
76	76000	76000
77	77000	77000
78	78000	78000
79	79000	79000
80	80000	80000
81	81000	81000
82	82000	82000
83	83000	83000
84	84000	84000
85	85000	85000
86	86000	86000
87	87000	87000
88	88000	88000
89	89000	89000
90	90000	90000
91	91000	91000
92	92000	92000
93	93000	93000
94	94000	94000
95	95000	95000
96	96000	96000
97	97000	97000
98	98000	98000
99	99000	99000
100	100000	100000

FIG.

ITEM

I-1

CROSS-REFERENCE INDEXES

STOCK NUMBER	NATIONAL STOCK NUMBER INDEX		FIG.	ITEM
	FIG.	ITEM		
5935-00-973-1733	5	21		
5355-00-973-1734	5	50		
5935-00-973-1859	5	24		
5820-00-973-2401	3	15		
5910-00-973-2489	6	1		
5910-00-973-2821	6	2		
5820-00-973-3578	3	71		
5820-00-973-3579	3	70		
5820-00-973-3580	3	68		
5820-00-973-3581	3	52		
5820-00-973-3582	3	53		
5820-00-973-3583	3	54		
5820-00-973-3585	3	60		
5820-00-973-3595	3	58		
5915-00-973-3596	3	57		
5963-00-973-3598	3	66		
5820-00-973-3600	3	62		
5820-00-973-3602	3	65		
5820-00-973-3603	3	8		
5820-00-973-3604	3	3		
5310-00-973-3697	5	44		
5820-00-973-3957	5	5		
5330-00-973-3960	5	9		
5355-00-973-3962	5	12		
5820-00-973-3963	5	26		
5999-00-973-4011	3	18		
5355-00-973-4334	3	10		
5820-00-973-4335	3	64		
5820-00-973-4336	3	74		
5930-00-978-2110	5	31		
5935-00-978-4357	5	25		
5930-00-983-3962	6	11		
6695-00-983-8797	5	13		
5305-00-984-4982	3	28		
	6	20		
5305-00-984-4984	3	35		
5305-00-984-4988	3	42		
5915-00-985-0867	5	52		
5305-00-993-0190	3	47		
	6	16		
5305-00-993-0191	3	32		
	6	9		
6135-01-034-2239	1	4		
8465-01-073-8326	1	6		
5365-01-099-3418	3	19		
5365-01-099-3420	6	6		
5820-01-099-9173	5	34		
5340-01-101-5645	5	10		
5820-01-210-9954	3	59		

SECTION IV

TM11-5820-398-34P

CROSS-REFERENCE INDEXES

FSCM	PART NUMBER	PART NUMBER INDEX STOCK NUMBER	FIG.	ITEM
80058	AB-591/PRC-25	5985-00-086-7149	1	9
80058	AT-271A/PRC	5985-00-646-2365	1	2
80058	AT-892/PRC-25	5820-00-889-3803	1	3
80058	BA-5598/U	6135-01-034-2239	1	4
71590	BA1401-003		5	30
80058	BA4386PRC25	6135-00-926-8322	1	4
80058	CW-503/PRC-25	5820-00-086-7138	1	10
81349	MIL-F-43834		1	8
81349	MIL-S-43828		1	7
81349	MIL-S-43835	8465-01-073-8326	1	6
96906	MS-51957-14	5305-00-054-5648	5	7
96906	MS-51957-16	5305-00-054-5650	5	8
96906	MS16624-1037	5365-00-715-1152	5	40
96906	MS16995-9	5305-00-068-5276	3	33
96906	MS24585C238	5360-00-889-3298	3	14
96906	MS27183-3	5310-00-951-4679	3	46
96906	MS27183-4	5310-00-950-1310	6	13
96906	MS28775-020	5330-00-585-7723	5	19
96906	MS35206-202	5305-00-762-7482	3	73
96906	MS35206-203	5305-00-889-3118	3	25
96906	MS35206-212	5305-00-993-0191	3	32
			6	9
96906	MS35206-214	5305-00-993-0190	3	47
			6	16
96906	MS35206-225	5305-00-984-4982	3	28
			6	20
96906	MS35206-228	5305-00-984-4988	3	42
96906	MS35223-13	5305-00-405-8960	3	41
			6	12
96906	MS35223-27	5305-00-984-4984	3	35
96906	MS35333-110	5310-00-022-8847	5	2
96906	MS35335-85	5310-00-939-1063	3	40
			6	24
96906	MS35338-135	5310-00-933-8118	5	6
96906	MS35338-156	5310-00-869-4199	3	37
96906	MS35338-39	5310-00-543-5060	3	26
96906	MS35338-40	5310-00-543-2410	3	16
			6	8
96906	MS35338-41	5310-00-045-4007	3	12
			5	27
			6	19
96906	MS35649-242	5310-00-934-9739	3	17
			6	21
96906	MS51959-2	5305-00-764-2966	5	46
96906	MS51981-8	5305-00-716-7833	5	36
96906	MS91524		5	33
96906	MS91525-2AP3S0Z	5355-00-656-1358	5	18
81349	M24251-6-5	5960-00-860-7710	3	45
80058	RT-505/PRC-25	5820-00-857-0934	1	1
71482	RY4YY1A3P		3	24
80063	SM-B-182386	5820-00-295-7122	2	1

CROSS-REFERENCE INDEXES

FSCM	PART NUMBER	PART NUMBER INDEX STOCK NUMBER	FIG.	ITEM
80063	SM-B-447019	5305-00-937-3846	3	48
80063	SM-B-447043-1	5365-01-099-3418	3	19
80063	SM-B-447043-2	5365-01-099-3420	6	6
80063	SM-B-447066-3	5305-00-889-3023	3	11
80063	SM-B-447066-4	5305-00-951-5164	3	38
80063	SM-B-447107-5		5	42
80063	SM-B-447221	5340-01-101-5645	5	10
80063	SM-B-447222	6695-00-983-8797	5	13
80063	SM-B-447223	5330-00-892-4293	5	11
80063	SM-B-447224	5305-00-889-3024	3	21
80063	SM-B-447225	5355-00-973-3962	5	12
80063	SM-B-447249		3	30
80063	SM-B-447265	5340-00-497-9853	4	5
80063	SM-B-447299	5820-00-937-6793	5	47
80063	SM-B-447302-2	5315-00-847-3735	5	29
80063	SM-B-447302-3	5315-00-823-8740	5	35
80063	SM-B-447303	5310-00-889-2583	5	39
80063	SM-B-447304	5360-00-889-3299	5	37
80063	SM-B-447308	5310-00-973-3697	5	44
80063	SM-B-447320	9320-00-930-0724	4	7
80063	SM-B-447348-1		4	3
80063	SM-B-447355	5330-00-973-3960	5	9
80063	SM-B-447392	3120-00-973-1508	5	22
80063	SM-B-447439	5935-00-973-1733	5	21
80063	SM-B-447440	5340-00-973-1732	5	53
80063	SM-B-447445-3		5	48
80063	SM-B-447445-4	5305-00-054-5647	5	23
80063	SM-B-447445-5		5	17
80063	SM-B-447445-6		5	14
80063	SM-B-447461	9905-00-404-5959	4	6
80063	SM-B-447575	5820-00-973-1505	3	34
80063	SM-B-447661	5930-00-983-3962	6	11
80063	SM-B-447665	5310-00-889-2584	6	18
80063	SM-B-447694-1	5310-00-889-2586	5	43
80063	SM-B-447694-2		3	22
80063	SM-B-447694-3	5310-00-951-5660	5	49
80063	SM-B-447694-4	5310-00-951-5661	5	15
80063	SM-B-447694-6	5310-00-889-2585	5	16
80063	SM-B-447721-46		3	44
80063	SM-B-447721-69		3	50
80063	SM-B-447725		5	4
80063	SM-B-447766	5940-00-937-9929	6	25
80063	SM-B-447771	5995-00-889-1087	3	39
80063	SM-B-447784	5355-00-973-4334	3	10
80063	SM-B-447785		3	75
80063	SM-B-447786	5305-00-930-0736	3	76
80063	SM-B-447930	5310-00-937-4458	3	13
80063	SM-B-447951		6	23
80063	SM-B-447958	5305-00-901-6855	3	49
			6	3
80063	SM-B-447960	5310-00-930-0758	3	51

CROSS-REFERENCE INDEXES

FSCM	PART NUMBER	PART NUMBER INDEX STOCK NUMBER	FIG.	ITEM
80063	SM-B-447960	5310-00-930-0758	6	4
80063	SM-B-447968		5	28
80063	SM-B-447971		6	14
80063	SM-B-91329	5820-00-930-0723	2	2
80063	SM-C-447052	5355-00-889-3424	5	32
80063	SM-C-447075	5935-00-951-6474	6	15
80063	SM-C-447085	5945-00-951-6458	3	2
80063	SM-C-447094	5930-00-978-2110	5	31
80063	SM-C-447102	5935-00-892-9139	5	20
80063	SM-C-447121-3	5315-00-951-7377	3	36
80063	SM-C-447269	5820-00-973-1477	3	69
80063	SM-C-447287	5820-01-099-9173	5	34
80063	SM-C-447306	5355-00-951-5165	5	41
80063	SM-C-447307	5355-00-973-1734	5	50
80063	SM-C-447321-2	5340-00-134-3493	4	2
80063	SM-C-447403	5935-00-978-4357	5	25
80063	SM-C-447601		3	77
80063	SM-C-447795	5820-00-973-4336	3	74
80063	SM-C-447976-1	5355-00-930-0728	5	38
80063	SM-C-447976-2	5355-00-930-0729	5	45
80063	SM-C-544246	5965-00-933-6896	1	11
80063	SM-C-875638		3	27
80063	SM-D-447113	5820-00-973-1624	3	7
80063	SM-D-447131		3	67
80063	SM-D-447137	5910-00-973-2489	6	1
80063	SM-D-447138	5910-00-973-2821	6	2
80063	SM-D-447177	5820-00-973-3603	3	8
80063	SM-D-447180	5935-00-951-6473	6	7
80063	SM-D-447251	5915-00-951-5203	3	4
80063	SM-D-447313	5820-00-973-3957	5	5
80063	SM-D-447314	5820-00-973-3604	3	3
80063	SM-D-447316	5820-00-973-1622	3	5
80063	SM-D-447318	5820-00-973-1623	3	6
80063	SM-D-447322-1	4820-00-296-9677	4	4
80063	SM-D-447350	5820-00-973-3963	5	26
80063	SM-D-447351	5820-00-973-1731	3	23
80063	SM-D-447352		6	17
80063	SM-D-447353	5820-00-973-1506	3	9
80063	SM-D-447367	5915-00-985-0867	5	52
80063	SM-D-447407	5820-00-973-3585	3	60
80063	SM-D-447425	5820-00-419-9634	3	43
80063	SM-D-447446	5820-01-210-9954	3	59
80063	SM-D-447447	5820-00-973-3595	3	58
80063	SM-D-447448	5915-00-973-3596	3	57
80063	SM-D-447450	5963-00-973-3598	3	66
80063	SM-D-447451	6110-00-957-1460	3	61
80063	SM-D-447452	5820-00-973-3600	3	62
80063	SM-D-447453		3	63
80063	SM-D-447454	5820-00-973-4335	3	64
80063	SM-D-447455	5820-00-973-3602	3	65
80063	SM-D-447462	5820-00-973-3580	3	68

CROSS-REFERENCE INDEXES

FSCM	PART NUMBER	PART NUMBER INDEX STOCK NUMBER	FIG.	ITEM
80063	SM-D-447472	5820-00-973-2401	3	15
80063	SM-D-447554	5955-00-973-1476	3	55
80063	SM-D-447555	5820-00-973-3578	3	71
80063	SM-D-447556	5820-00-973-3579	3	70
80063	SM-D-447557	5820-00-973-3581	3	52
80063	SM-D-447558	5820-00-973-3582	3	53
80063	SM-D-447559	5820-00-973-3583	3	54
80063	SM-D-447593	5999-00-973-4011	3	18
80063	SM-D-447620	5820-00-957-1513	3	72
80063	SM-D-447781		3	1
80063	SM-D-449063	5820-00-813-0192	3	29
			5	51
80063	SM-D-621272	5820-00-007-9542	3	56
80063	SMB447445-7		3	31
80063	SMD447264		4	1
80063	SMD447322	6140-00-952-1798	3	20
95238	SM7-20SGDF	5935-00-948-2719	6	22
80058	ST-138/PRC-25	5820-00-892-8094	1	5
80058	U-317/U	5935-00-973-1859	5	24
80058	U-318/U	5935-00-892-9119	5	1
80058	UG-1873/U	5935-00-832-4904	5	3
78189	1210-06	5310-00-257-6223	6	5
78189	2204-04-00	5940-00-682-2477	6	10

CROSS-REFERENCE INDEXES

FIG.	ITEM	FIGURE AND ITEM STOCK NUMBER	NUMBER INDEX FSCM	PART NUMBER
1	1	5820-00-857-0934	80058	RT-505/PRC-25
1	2	5985-00-646-2365	80058	AT-271A/PRC
1	3	5820-00-889-3803	80058	AT-892/PRC-25
1	4	6135-00-926-8322	80058	BA4386PRC25
1	4	6135-01-034-2239	80058	BA-5598/U
1	5	5820-00-892-8094	80058	ST-138/PRC-25
1	6	8465-01-073-8326	81349	MIL-S-43835
1	7		81349	MIL-S-43828
1	8		81349	MIL-F-43834
1	9	5985-00-086-7149	80058	AB-591/PRC-25
1	10	5820-00-086-7138	80058	CW-503/PRC-25
1	11	5965-00-933-6896	80063	SM-C-544246
2	1	5820-00-295-7122	80063	SM-B-182386
2	2	5820-00-930-0723	80063	SM-B-91329
3	1		80063	SM-D-447781
3	2	5945-00-951-6458	80063	SM-C-447085
3	3	5820-00-973-3604	80063	SM-D-447314
3	4	5915-00-951-5203	80063	SM-D-447251
3	5	5820-00-973-1622	80063	SM-D-447316
3	6	5820-00-973-1623	80063	SM-D-447318
3	7	5820-00-973-1624	80063	SM-D-447113
3	8	5820-00-973-3603	80063	SM-D-447177
3	9	5820-00-973-1506	80063	SM-D-447353
3	10	5355-00-973-4334	80063	SM-B-447784
3	11	5305-00-889-3023	80063	SM-B-447066-3
3	12	5310-00-045-4007	96906	MS35338-41
3	13	5310-00-937-4458	80063	SM-B-447930
3	14	5360-00-889-3298	96906	MS24585C238
3	15	5820-00-973-2401	80063	SM-D-447472
3	16	5310-00-543-2410	96906	MS35338-40
3	17	5310-00-934-9739	96906	MS35649-242
3	18	5999-00-973-4011	80063	SM-D-447593
3	19	5365-01-099-3418	80063	SM-B-447043-1
3	20	6140-00-952-1798	80063	SMD447322
3	21	5305-00-889-3024	80063	SM-B-447224
3	22		80063	SM-B-447694-2
3	23	5820-00-973-1731	80063	SM-D-447351
3	24		71482	RY4YY1A3P
3	25	5305-00-889-3118	96906	MS35206-203
3	26	5310-00-543-5060	96906	MS35338-39
3	27		80063	SM-C-875638
3	28	5305-00-984-4982	96906	MS35206-225
3	29	5820-00-813-0192	80063	SM-D-449063
3	30		80063	SM-B-447249
3	31		80063	SMB447445-7
3	32	5305-00-993-0191	96906	MS35206-212
3	33	5305-00-068-5276	96906	MS16995-9
3	34	5820-00-973-1505	80063	SM-B-447575
3	35	5305-00-984-4984	96906	MS35223-27
3	36	5315-00-951-7377	80063	SM-C-447121-3
3	37	5310-00-869-4199	96906	MS35338-156

CROSS-REFERENCE INDEXES

FIG.	ITEM	FIGURE AND ITEM NUMBER INDEX STOCK NUMBER	FSCM	PART NUMBER
3	38	5305-00-951-5164	80063	SM-B-447066-4
3	39	5995-00-889-1087	80063	SM-B-447771
3	40	5310-00-939-1063	96906	MS35335-85
3	41	5305-00-405-8960	96906	MS35223-13
3	42	5305-00-984-4988	96906	MS35206-228
3	43	5820-00-419-9634	80063	SM-D-447425
3	44		80063	SM-B-447721-46
3	45	5960-00-860-7710	81349	M24251-6-5
3	46	5310-00-951-4679	96906	MS27183-3
3	47	5305-00-993-0190	96906	MS35206-214
3	48	5305-00-937-3846	80063	SM-B-447019
3	49	5305-00-901-6855	80063	SM-B-447958
3	50		80063	SM-B-447721-69
3	51	5310-00-930-0758	80063	SM-B-447960
3	52	5820-00-973-3581	80063	SM-D-447557
3	53	5820-00-973-3582	80063	SM-D-447558
3	54	5820-00-973-3583	80063	SM-D-447559
3	55	5955-00-973-1476	80063	SM-D-447554
3	56	5820-00-007-9542	80063	SM-D-621272
3	57	5915-00-973-3596	80063	SM-D-447448
3	58	5820-00-973-3595	80063	SM-D-447447
3	59	5820-01-210-9954	80063	SM-D-447446
3	60	5820-00-973-3585	80063	SM-D-447407
3	61	6110-00-957-1460	80063	SM-D-447451
3	62	5820-00-973-3600	80063	SM-D-447452
3	63		80063	SM-D-447453
3	64	5820-00-973-4335	80063	SM-D-447454
3	65	5820-00-973-3602	80063	SM-D-447455
3	66	5963-00-973-3598	80063	SM-D-447450
3	67		80063	SM-D-447131
3	68	5820-00-973-3580	80063	SM-D-447462
3	69	5820-00-973-1477	80063	SM-C-447269
3	70	5820-00-973-3579	80063	SM-D-447556
3	71	5820-00-973-3578	80063	SM-D-447555
3	72	5820-00-957-1513	80063	SM-D-447620
3	73	5305-00-762-7482	96906	MS35206-202
3	74	5820-00-973-4336	80063	SM-C-447795
3	75		80063	SM-B-447785
3	76	5305-00-930-0736	80063	SM-B-447786
3	77		80063	SM-C-447601
4	1		80063	SMD447264
4	2	5340-00-134-3493	80063	SM-C-447321-2
4	3		80063	SM-B-447348-1
4	4	4820-00-296-9677	80063	SM-D-447322-1
4	5	5340-00-497-9853	80063	SM-B-447265
4	6	9905-00-404-5959	80063	SM-B-447461
4	7	9320-00-930-0724	80063	SM-B-447320
5	1	5935-00-892-9119	80058	U-318/U
5	2	5310-00-022-8847	96906	MS35333-110
5	3	5935-00-832-4904	80058	UG-1873/U
5	4		80063	SM-B-447725

CROSS-REFERENCE INDEXES

FIG.	ITEM	FIGURE AND ITEM STOCK NUMBER	NUMBER INDEX FSCM	PART NUMBER
5	5	5820-00-973-3957	80063	SM-D-447313
5	6	5310-00-933-8118	96906	MS35338-135
5	7	5305-00-054-5648	96906	MS-51957-14
5	8	5305-00-054-5650	96906	MS-51957-16
5	9	5330-00-973-3960	80063	SM-B-447355
5	10	5340-01-101-5645	80063	SM-B-447221
5	11	5330-00-892-4293	80063	SM-B-447223
5	12	5355-00-973-3962	80063	SM-B-447225
5	13	6695-00-983-8797	80063	SM-B-447222
5	14		80063	SM-B-447445-6
5	15	5310-00-951-5661	80063	SM-B-447694-4
5	16	5310-00-889-2585	80063	SM-B-447694-6
5	17		80063	SM-B-447445-5
5	18	5355-00-656-1358	96906	MS91525-2AP3S0Z
5	19	5330-00-585-7723	96906	MS28775-020
5	20	5935-00-892-9139	80063	SM-C-447102
5	21	5935-00-973-1733	80063	SM-B-447439
5	22	3120-00-973-1508	80063	SM-B-447392
5	23	5305-00-054-5647	80063	SM-B-447445-4
5	24	5935-00-973-1859	80058	U-317/U
5	25	5935-00-978-4357	80063	SM-C-447403
5	26	5820-00-973-3963	80063	SM-D-447350
5	27	5310-00-045-4007	96906	MS35338-41
5	28		80063	SM-B-447968
5	29	5315-00-847-3735	80063	SM-B-447302-2
5	30		71590	BA1401-003
5	31	5930-00-978-2110	80063	SM-C-447094
5	32	5355-00-889-3424	80063	SM-C-447052
5	33		96906	MS91524
5	34	5820-01-099-9173	80063	SM-C-447287
5	35	5315-00-823-8740	80063	SM-B-447302-3
5	36	5305-00-716-7833	96906	MS51981-8
5	37	5360-00-889-3299	80063	SM-B-447304
5	38	5355-00-930-0728	80063	SM-C-447976-1
5	39	5310-00-889-2583	80063	SM-B-447303
5	40	5365-00-715-1152	96906	MS16624-1037
5	41	5355-00-951-5165	80063	SM-C-447306
5	42		80063	SM-B-447107-5
5	43	5310-00-889-2586	80063	SM-B-447694-1
5	44	5310-00-973-3697	80063	SM-B-447308
5	45	5355-00-930-0729	80063	SM-C-447976-2
5	46	5305-00-764-2966	96906	MS51959-2
5	47	5820-00-937-6793	80063	SM-B-447299
5	48		80063	SM-B-447445-3
5	49	5310-00-951-5660	80063	SM-B-447694-3
5	50	5355-00-973-1734	80063	SM-C-447307
5	51	5820-00-813-0192	80063	SM-D-449063
5	52	5915-00-985-0867	80063	SM-D-447367
5	53	5340-00-973-1732	80063	SM-B-447440
6	1	5910-00-973-2489	80063	SM-D-447137
6	2	5910-00-973-2821	80063	SM-D-447138

FILL IN YOUR
UNIT'S ADDRESS

FOLD BACK

DEPARTMENT OF THE ARMY

POSTAGE AND FEES PAID
DEPARTMENT OF THE ARMY
DOD 314




OFFICIAL BUSINESS
PENALTY FOR PRIVATE USE \$300

SAMPLE

Commander
US Army Communications-Electronics Command
and Fort Monmouth
ATTN: AMSEL-LC-ME-PS
Fort Monmouth, New Jersey 07703-5000

TEAR ALONG PERFORATED LINE

RECOMMENDED CHANGES TO EQUIPMENT TECHNICAL PUBLICATIONS

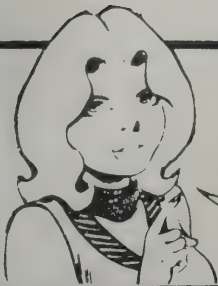

SOMETHING WRONG WITH THIS PUBLICATION?

THEN...JOT DOWN THE
DOPE ABOUT IT ON THIS
FORM. CAREFULLY TEAR
IT OUT, FOLD IT AND
DROP IT IN THE MAIL.

FROM: (PRINT YOUR UNIT'S COMPLETE ADDRESS)

DATE SENT

PUBLICATION NUMBER

TM 11-5820-398-34P

PUBLICATION DATE

1 November 88

PUBLICATION TITLE

Radio Set AN/PRC-25

BE EXACT PIN-POINT WHERE IT IS

PAGE
NO.

PARA-
GRAPH

FIGURE
NO.

TABLE
NO.

IN THIS SPACE TELL WHAT IS WRONG
AND WHAT SHOULD BE DONE ABOUT IT:

PRINTED NAME GRADE OR TITLE AND TELEPHONE NUMBER

SIGN HERE

FILL IN YOUR
UNIT'S ADDRESS

FOLD BACK

DEPARTMENT OF THE ARMY

POSTAGE AND FEES PAID
DEPARTMENT OF THE ARMY
DOD 314



OFFICIAL BUSINESS
PENALTY FOR PRIVATE USE \$300

Commander
US Army Communications-Electronics Command
and Fort Monmouth
ATTN: AMSEL-LC-ME-PS
Fort Monmouth, New Jersey 07703-5000

TEAR ALONG PERFORATED LINE

RECOMMENDED CHANGES TO EQUIPMENT TECHNICAL PUBLICATIONS



SOMETHING WRONG WITH THIS PUBLICATION?

THEN...JOT DOWN THE
DOPE ABOUT IT ON THIS
FORM. CAREFULLY TEAR
IT OUT, FOLD IT AND
DROP IT IN THE MAIL.

FROM: (PRINT YOUR UNIT'S COMPLETE ADDRESS)

DATE SENT

PUBLICATION NUMBER

TM 11-5820-398-34P

PUBLICATION DATE

1 November 88

PUBLICATION TITLE

Radio Set AN/PRC-25

BE EXACT PIN-POINT WHERE IT IS

PAGE
NO.

PARA-
GRAPH

FIGURE
NO.

TABLE
NO.

IN THIS SPACE TELL WHAT IS WRONG
AND WHAT SHOULD BE DONE ABOUT IT:

PRINTED NAME GRADE OR TITLE AND TELEPHONE NUMBER

SIGN HERE

DA FORM 2028-2
1 JUL 79

PREVIOUS EDITIONS
ARE OBSOLETE

P.S.--IF YOUR OUTFIT WANTS TO KNOW ABOUT YOUR
RECOMMENDATION MAKE A CARBON COPE OF THIS
AND GIVE IT TO YOUR HEADQUARTERS.

TEAR ALONG PERFORATED LINE

FILL IN YOUR
UNIT'S ADDRESS

FOLD BACK

DEPARTMENT OF THE ARMY

OFFICIAL BUSINESS
PENALTY FOR PRIVATE USE \$300


POSTAGE AND FEES PAID
DEPARTMENT OF THE ARMY
DOD 314



Commander
US Army Communications-Electronics Command
and Fort Monmouth
ATTN: AMSEL-LC-ME-PS
Fort Monmouth, New Jersey 07703-5000

TEAR ALONG PERFORATED LINE

RECOMMENDED CHANGES TO EQUIPMENT TECHNICAL PUBLICATIONS

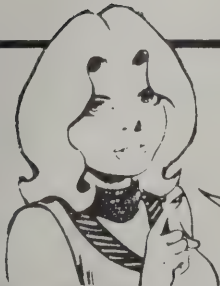

SOMETHING WRONG WITH THIS PUBLICATION?

THEN...JOT DOWN THE
DOPE ABOUT IT ON THIS
FORM. CAREFULLY TEAR
IT OUT, FOLD IT AND
DROP IT IN THE MAIL.

FROM: (PRINT YOUR UNIT'S COMPLETE ADDRESS)

DATE SENT

PUBLICATION NUMBER

TM 11-5820-398-34P

PUBLICATION DATE

1 November 88

PUBLICATION TITLE

Radio Set AN/PRC-25

BE EXACT PIN-POINT WHERE IT IS

PAGE
NO.

PARA-
GRAPH

FIGURE
NO.

TABLE
NO.

IN THIS SPACE TELL WHAT IS WRONG
AND WHAT SHOULD BE DONE ABOUT IT:

PRINTED NAME GRADE OR TITLE AND TELEPHONE NUMBER

SIGN HERE

DA FORM 2028-2
1 JUL 79

PREVIOUS EDITIONS
ARE OBSOLETE

P.S.--IF YOUR OUTFIT WANTS TO KNOW ABOUT YOUR
RECOMMENDATION MAKE A CARBON COPE OF THIS
AND GIVE IT TO YOUR HEADQUARTERS.

TEAR ALONG PERFORATED LINE

FILL IN YOUR
UNIT'S ADDRESS

FOLD BACK

DEPARTMENT OF THE ARMY

POSTAGE AND FEES PAID
DEPARTMENT OF THE ARMY
DOD 314



OFFICIAL BUSINESS
PENALTY FOR PRIVATE USE \$300

Commander
US Army Communications-Electronics Command
and Fort Monmouth
ATTN: AMSEL-LC-ME-PS
Fort Monmouth, New Jersey 07703-5000

TEAR ALONG PERFORATED LINE

By Order of the Secretary of the Army:

Official:

CARL E. VUONO
General, United States Army
Chief of Staff

R.L. DILWORTH
Brigadier General, United States Army
The Adjutant General

DISTRIBUTION:

To be distributed in accordance with DA Form 12-51 DS/GS requirements
for AN/PRC-25.

IN CASE OF A FIRE IN THE NIGHT


1. Turn off the gas
2. Turn off the electricity
3. Turn off the water

1. Turn off the gas

2. Turn off the electricity
3. Turn off the water

4. Turn off the gas
5. Turn off the electricity
6. Turn off the water

7. Turn off the gas
8. Turn off the electricity
9. Turn off the water
10. Turn off the gas
11. Turn off the electricity
12. Turn off the water

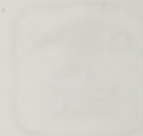

13. Turn off the gas
14. Turn off the electricity
15. Turn off the water
16. Turn off the gas
17. Turn off the electricity
18. Turn off the water

